

# Royal Traveller Annexe instructions



1. Lay the tent out with the pole sleeves facing up. Take care to ensure that the webbing adjustment points on both sides of the fly are slacked off to give the maximum length of webbing between both sets of pins and rings.
2. Take each pole and feed through the sleeve from one side of the fly to the other. Always push the poles as opposed to pulling them as this way they will always hold together as one. Once all poles are sleeved through the fly then start to make them into the loop. Take the rear pole first and insert the end ferrule into the pin on the webbing ring.
3. Take each pole and feed through the sleeve from one side of the fly to the other. Always push the poles as opposed to pulling them as this way they will always hold together as one. Once all poles are sleeved through the fly then start to make them into the loop. Take the rear pole first and insert the end ferrule into the pin on the webbing ring.
4. Cross to the other side of the fly and pull the webbing across to enable the opposite pin to be placed in the free end of the pole, this should make the pole into a semi circle.
5. Repeat this with the two other poles, so that they are semi circles, and lay out on the ground.
6. Now take four of the guy lines and attach them through the eyelets on to either side of the front pole semi circle and either side of the back semi circle. With another person assisting, pull the tent up so that the front pole is vertical and located where you want it. Now peg out the front guy lines so that they support the front pole to stand alone.
7. Pull the rest of the tent back to make the sides taut and peg out the two rear guy lines. Adjust the pole tensioning straps (at the pin and ring buckle) to take the slack out of the flysheet.
8. Now the tent can be pegged out through the pin and rings for all four poles, either side of the tent. Make sure the poles are in a straight line to the vertical seams on the tent fly and that they are in a straight line.
9. Now take the sprung metal poles and assemble them into one length per pole, ensure that these are adjusted to their shortest length. With both of them constructed feed them inside the tent in line with the ties on the sidewall above the ventilated windows. Extend the pole to take up some of the slack through the side of the tent, make sure the pole slots into the black webbing pockets at both the front and rear of the tent. These are not stretching poles, but designed as stabilisers to stop the tent moving in excessive winds. Once any slack is taken out of the side of the tent tighten the clamp on the side of the pole tube.
10. Peg out the rest of the tent and use the guy lines provided.
11. Fit the supplied inner tent (if required), peg out the groundsheet of the inner tent and then suspend it with the supplied hooks/eyes.
12. Use canopy poles only in good weather and never leave the canopies up unattended..

# Royal Traveller Annexe instructions

## General points for all models

Following the guidelines and notes detailed below should lead to trouble free usage of your new ROYAL tent

### BEFORE YOU GO

#### PRACTICE:

- Before your camping trip we recommend that you pitch your tent at home. This should mean that:
  - a. You will have the confidence to erect your tent on arrival
  - b. You will arrive on site confident that you have all accessories needed to erect the tent

#### WEATHERING:

- The weathering process is essential on all new tent products.
- We advise that before using your new product it is erected, pegged out and left to get thoroughly wet before being allowed to dry naturally.

### ON SITE

#### PITCHING

- Pitch your tent on an even patch of ground, preferably with a slight incline to aid water run off.
- Remove all large and sharp stones that could cause damage to the groundsheet
- Avoid pitching under trees, as sap will drip off them, marking the tent
- All zips should be closed during assembly
- For greater stability, drive the pegs into the ground at a slant, making sure there is an even tension on the tent from all sides

### IN USE

- Do not use the storage pockets for heavy items. It will damage them and the tent
- Treat the zippers with care. If the zip sticks, slowly and carefully manipulate it, DO NOT USE FORCE. Periodically treat the zip with a silicon zip easier spray to retain the suppleness
- Keep the inner and outer tents well apart in wet weather. Contact between the two could result in leaking

### BREAKING DOWN

- When breaking down tents should always be clean and dry. They should be stored in a cool dry place
- If the tent has to be packed when it is wet, ensure that it is re-pitched upon arrival at home and allowed to fully dry. If the tent is left packed and wet it will develop mildew

### OTHER TIPS

#### CONDENSATION:

Condensation occurs naturally in all tents and may result in dampness on the inner surfaces arising overnight. This should not be confused with leaking, which may arise from misuse or manufacturing faults

- All tents made from synthetic materials are subject to condensation. It is therefore essential that the

# Royal Traveller Annexe instructions

ventilation provided be used especially during the night.

- **DO NOT CONFUSE CONDENSATION WITH LEAKING**

## **WEATHER DAMAGE:**

- All tents are temporary structures and not designed for prolonged exposure to the elements
  - **WATER:**  
Although tents are designed to repel water, occasionally you may find slight leakage through a seam. This can be treated by applying a seam sealer which is available through your local retailer
  - **SUNLIGHT:**  
Prolonged exposure to direct sunlight will cause colours to fade over time.
  - **WIND:**  
You can help avoid your tent being wind damaged by ensuring the tension in the pegging points is not too tight, thereby allowing the guy lines to take the strain

**SUN CANOPIES SHOULD ALWAYS BE TAKEN DOWN IN WINDY CONDITIONS**

## **MAINTENANCE**

- **CLEANING**  
Dirt should be removed with a soft brush and water only. Use of detergents will affect the waterproofing of your tent
- **REPAIRS/REPLACEMENT PARTS**  
ROYAL tents have a full parts back up service in case of damage/repair. Replacement components for all tents are available from all ROAYL tent retailers, who will be able to supply the required component of the tent.

## **WARRANTY**

This tent has been made with due care. We guarantee this product to be free from any manufacturing defects for twelve months. Any complaint must be made to your dealer within one year from the date of purchase accompanied by the original purchase receipt.

In order to minimize your inconvenience, our preferred warranty process is for any issues to be raised with the ROYAL retailer who sold the tent to you, They will inspect any faulty parts and swiftly provide a replacement component for any faulty items found.

Any damage caused through improper use or mishandling is not covered by this warranty, such as storm damage or prolonged assembly.

Under the Health And Safety At Work Act, it is not possible for a retailer or manufacturer to handle goods in a dirty or wet condition. We respectfully request that, in the unfortunate event that you need to return a product to us, you ensure that it is clean, dry and complete or your guarantee will be invalid.