




At home out there

KENSINGTON

1. Assemble poles as demonstrated in the diagram below

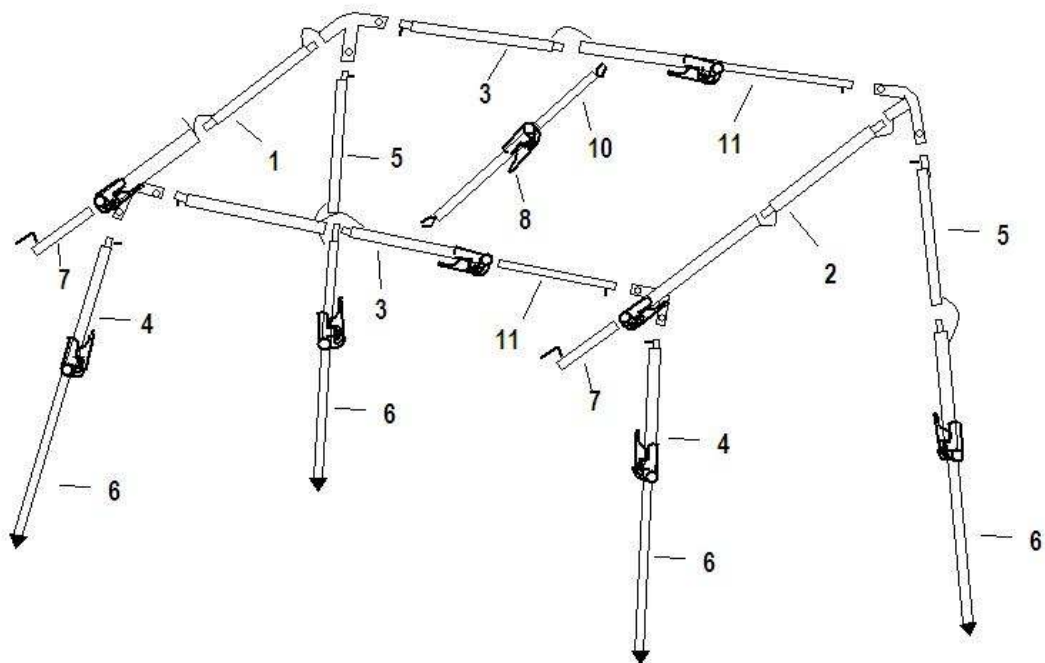

2. Open flysheet on ground, making sure that the doors are zipped fully and position door in desired direction and pull over frame. Secure onto frame with ties attached to flysheet and peg down to secure.